


Building Materials

Vanity Sink Base Cabinet Assembly Instruction

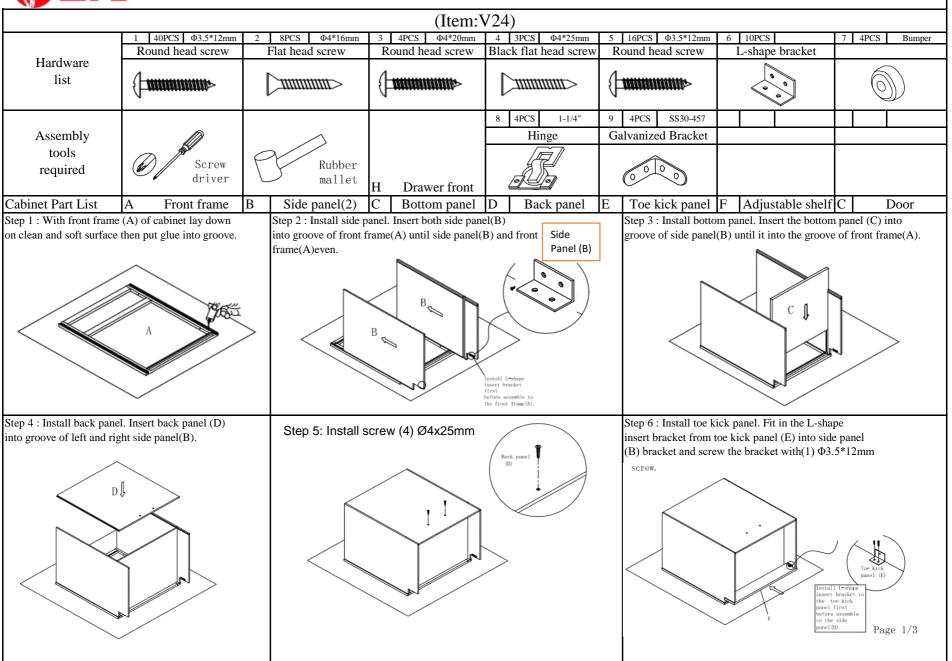





Building Materials Vanity Sink Base Cabinet Assembly Instruction

(Item: V24)


Step 7: Install back panel. Fit in the L-shape insert bracket from back panel (D) into side panel (B) bracket and assembly the bracket with (1) Φ 3.5*12mm screw.

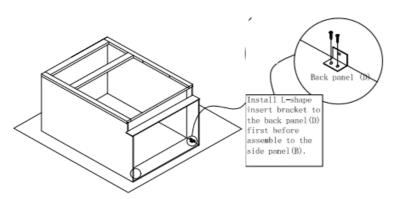

Step 8: Install corner block. Install rainbow bracket to the side panel (B), front frame (A) and back panel (D)with the(5)Ø4*16mm screw.

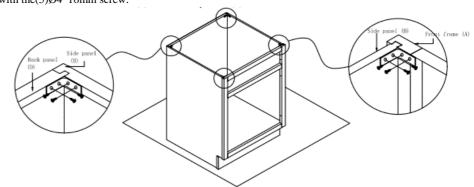

Step 9: Install door panel (G). Screw the hinge to the front frame (A) and door (G).

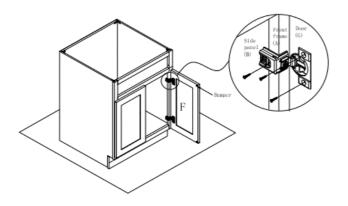

Step 10: Finish installion of the cabinet

